

# DRAWINGS MANUAL


## MODEL XCP-954

### Station Breakout Panel

#### LIST OF DRAWINGS

<i>Drawing No.</i>	<i>Title</i>
D-XCP-954/2-1	Panel Wiring
DXCP--954/3-1	Panel Layout

**RTS**™

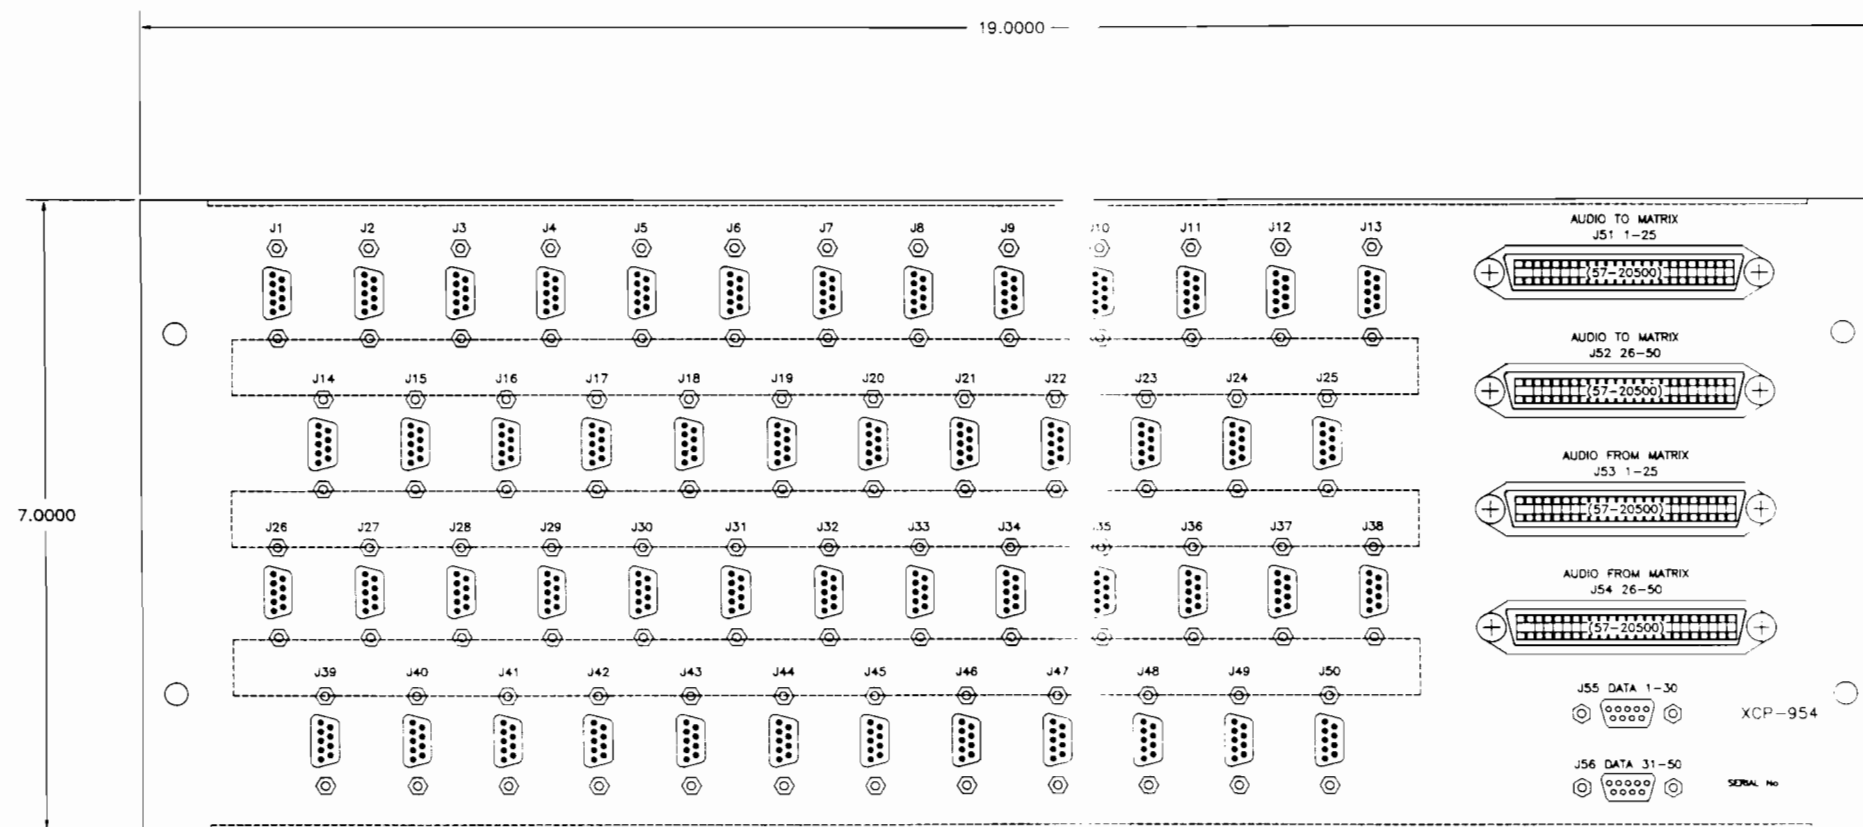

J1-J50 ARE DE9P  
J51-J54 ARE AMPHENOL 57-20500  
WITH AMP 552568-1  
J55, J56 ARE DE9S

ORIGINAL DRAFT	W.Y.	21-JUN-90	1
CONTROL No 101008			
XCP-954			
50 CHANNEL STATION BREAKOUT PANEL LAYOUT			
Drawn M.F.	Rev JAN 31/90	D	
Checked W.YAU	Rev	XCP-954/3-1	

## INTERCOM STATION CONNECTORS:

Connectors J1 to J50 are DE-9P plugs, wired as follows:

PIN #	FUNCTION
1	RS422 Data ( + )
2	RS422 Data ( - )
4	Audio to Matrix ( + )
5	Audio to Matrix ( - )
7	Audio from Matrix ( - )
8	Audio from Matrix ( + )
3,6,9	Shield

Note: Shields are connected to ground at the Keypanel end **ONLY**.

